

GIMA400 Installation Guide Revision 1



1 Safety

This instruction sheet gives details of safe installation and operation of the **GIMA400** electricity meter. Labels on each meter give details of equipment ratings for safe operation. Take time to examine all labels before commencing installation. Safety symbols on the meter have specific meanings as:



Safety may be impaired if the instructions are not followed or the meter is used in a manner not specified by the manufacturer.



Contains no user serviceable parts. Field wiring and commissioning should only be carried out by qualified personnel, in compliance with applicable national regulations.
e.g. National Electrical Code (NEC) for US; Canadian Electrical Code for Canada

For further information contact the supplier:

Address: Simpson Electric Company 520 Simpson Avenue Lac Du Flambeau, WI. (USA)
Web: www.simpsonelectric.com
Email: SimpsonSupport@simpsonelectric.com

2 Maintenance

The equipment should be maintained in good working order. Damaged equipment must be sent to the manufacturer (or his authorised agent) for repair. The meter may be cleaned by wiping lightly with a soft cloth. No solvents or cleaning agents should be used. All inputs and supplies must be isolated before cleaning any part of the equipment.

3 Intended Use

The **GIMA400** is a precision multi function electricity monitor which measures system power parameters, including kW, Volts and Amps and displays them on an LCD. Measured parameters may be sent to remote systems for storage or display using an optional communications interface (e.g. Modbus RTU RS485 or Ethernet).

The **GIMA400** is intended for mounting in the faceplate (panel) of an electrical enclosure with only the front keypad/display panel remaining accessible to an operator after installation. Panels should be 1mm to 4mm (0.04" to 0.16") thick with a square cut-out of 92mm (+0.8/-0.0mm) (3.62" +0.03" -0"). Insert the meter from the front of the panel, slide the panel clips from the rear of the case and push firmly against the panel ensuring even pressure on each clip.



The safety of any system containing the meter as a component remains the responsibility of the system manufacturer. After installation in a system, the ratings of the overall system, which reflect the ratings of the meter, must be visible to the user.



A suitably located and easily reached switch or circuit breaker must be included as part of the installation. This could, for example, be a safety-interlocking device on the door/front panel of the electrical enclosure. This switch/circuit breaker must be marked as the disconnecting device for the equipment and must comply with the relevant requirements of IEC 60947-1 and IEC 60947-3.



Disconnect / Isolate all supplies before commencing installation.

4 Standard Connections

4.1 Current Connections

4.1.1 Current Cables



Current cables must be rated for safe use in the electrical enclosure which houses the meter (e.g. UL1015) and must meet the following minimum specification: Temperature: 105°C (221°F); Insulation 600Vac.

4.1.2 Current Terminals

Voltage: 30Vac maximum
Cable: 22-14 AWG, Stripped 5.5 to 6.5mm (0.2" to 0.25")
Torque: 0.5Nm (4.4in lb)

4.2 Voltage Connections



To maintain proper insulation from the mains supply, the neutral wire should only be used in power networks where the system neutral is protectively earthed

4.2.1 Voltage Cables



Voltage cables must be rated for safe use in the electrical enclosure which houses the meter (e.g. UL1015) and must meet the following minimum specification: Temperature: 105°C (221°F); Insulation 600Vac.

4.2.2 Auxiliary Mains Supply

The meter is powered from an auxiliary mains supply which is required to energise the metering circuit and display. This can be connected in parallel with one of the measurement phase voltages if it is rated correctly.



Ensure the auxiliary mains supply L-N is powered from a correctly rated and fused AC source as specified on the meter label.

4.2.3 Voltage Terminals

Voltage: 277Vac (3-4)
480Vac (4-5, 5-6)
Cable: 30-14 AWG, Stripped 5.5 to 6.5mm (0.2" to 0.25")
Torque: 0.5Nm (4.4in lb)

4.2.4 Voltage Fuses

Fuses (US/Canada)

Rated Voltage	Type	Rupture In (A)	Standards
≥ 500Vac	Fast	1.0A	UL248 (US) C22.2 No. 248 (CAN)

Fuses (Other Countries)

Rated Voltage	Type	Rupture In (A)	Standards
≥ 500Vac	Fast	1.0A	IEC 60269 - 2

4.2.5 Auxiliary Mains Fuses

Fuses (US/Canada)

Rated Voltage	Type	Rupture In (A)	Standards
≥ 250Vac	Fast	0.1A	UL248 (US) C22.2 No. 248 (CAN)

Fuses (Other Countries)

Rated Voltage	Type	Rupture In (A)	Standards
≥ 250Vac	Fast	0.1A	IEC 60269 - 2

4.3 Communications Options

Communications outputs are safety isolated from the measurement voltages at a minimum of 3.5kV.



Communications cables running within an electrical enclosure may come close to high voltages and therefore must be insulated to the following minimum specification:
Safety Compliant: e.g UL1015; Operating Temperature: 105°C (221°F); Insulation 600Vac

4.3.1 RS485 Output Terminals (Optional)

Voltage: 30Vdc (13-14, 13a-14a)
Cable: 30-14 AWG, Stripped 5.5 to 6.5mm (0.2" to 0.25")
Torque: 0.5Nm (4.4in lb)

4.3.2 Ethernet Output (Optional)

Connection: RJ45
Cable: Cat5e FTP (Foil screened)


4.4 Pulse Output Connections

The pulse outputs take the form of isolated volt free normally open contact pairs. Pulse 1 is associated with active energy (kWh) and Pulse 2 with reactive energy (kvarh).

The contacts are isolated from all other circuits (3.5kV) and at 50V from pulse 1 to pulse 2.

Pulses can be used as input to remote counters, pulse loggers, building energy management system etc.

Light emitting diodes  and  remain **ON** during each associated output pulse.


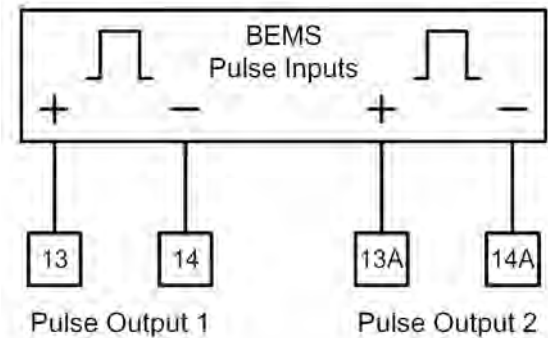


Pulse output cables running within an electrical enclosure may come close to high voltages and therefore must be insulated to the following minimum specification:
Safety Compliant: e.g UL1015; Operating Temperature: 105°C (221°F); Insulation 600Vac



4.4.1 Pulse Output Terminals

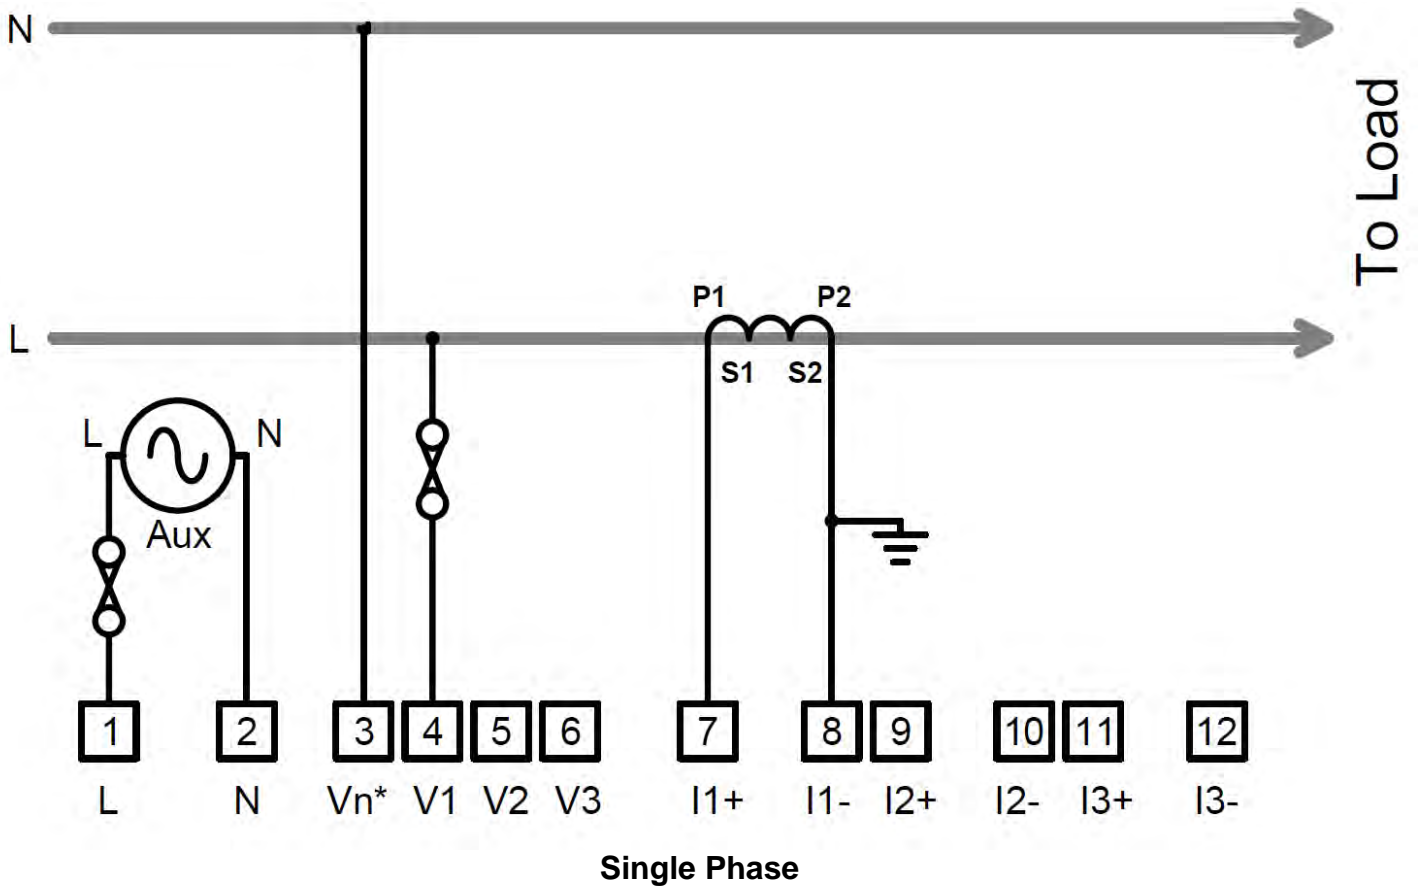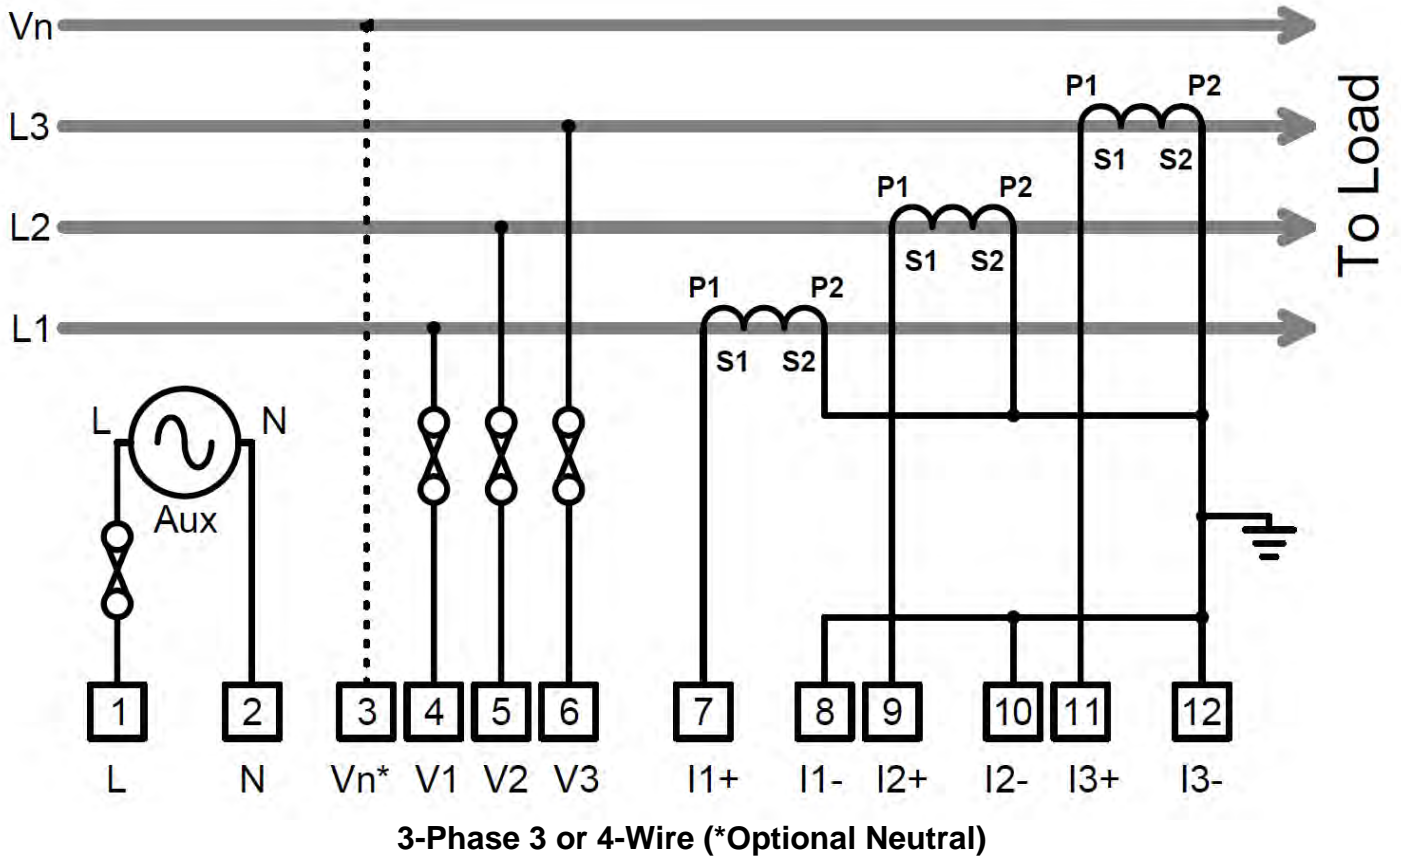


Voltage: 70Vdc/33Vac (13-14, 13a-14a)
Cable: 30-14 AWG, Stripped 6.0 to 7.0mm
Torque: 0.5Nm (4.4in lb)




4.5 Typical Connections








6 Programming

 and  to enter programming.

 or  selects from the standard list of settings while  is displayed. (List Mode)

 or  increases or decreases the value while  is displayed. (Fine adjust)

 and  together to toggle between  and .  Accepts the set value.






Current Transformer Primary



Voltage Transformer Primary⁶




Set the integration period in minutes used for the sliding time window MD calculation for kW and kvar.

 or  increments or decrements the value.  Accepts the set value.



Power MD Integration Time




Set the integration period in seconds used for the sliding time window calculation for voltage and current.

 or  increments or decrements the value.  Accepts the set value.



Current/Voltage Average Time


Set the instantaneous system kW level above which the Hours Run timer will accumulate. Below this level Hours Run will remain unchanged.

 or  increments or decrements the value.  Accepts the value.



Hours Run Trigger Point

Set the amount of energy (kWh Pls1 kvarh pls2) required to trigger each Pulse Output.

 or  selects the next/previous Pulse Rate.  Accepts the value.



Pulse Rate (kWh per Pulse)



 

Set the contact closure time for both pulse outputs.




 or  selects the next/previous Pulse Length from a standard list.  Accepts the value.



Pulse On Period (Seconds)

Tests both pulse outputs and associated circuits without the need of a test load.

 or  starts/stops a test pulse stream. The display shows  (Hold) or . The counter shows the total number of pulses during the test.

 and  reset the test counter to zero.  exits pulse test mode.



Pulse Test Mode

Note 6: If external VT is not used, **DO NOT ALTER** the voltage transformer primary setting for any other system voltage i.e. for 110V, 208V, 230V system. **LEAVE Un (Voltage Transformer Primary Setting) TO 480V ONLY.**

If external VT is used, alter the voltage transformer primary setting as stated in the following examples.

For 11000/110V VT, alter the setting to 48000 (multiplying factor: $11000 / 110 = 100$ i.e. 480×100)

For 6600/110V VT, alter the setting to 28800 (multiplying factor: $6600 / 110 = 60$ i.e. 480×60)

Specification

INPUTS	
System	3 Phase 3 or 4 Wire Unbalanced Load or Single Phase
Voltage Un	480/277V. 3 Phase 3 or 4 Wire
Current In	5Amp from external CTs. (1A optional) Isolated at 2.21kV
Measurement Range	Voltage 20% to 120% Un Current 0.2% to 120%
Frequency Range	Fundamental 45 to 65Hz Harmonics Up to 25th harmonic at 60Hz Individual to the 15th
Burden	Voltage <0.1VA per phase Current <0.1VA per phase
Overload	Voltage x4 for 1 hour Current x20 for 0.5 seconds max
DISPLAY	
Type	Custom, Supertwist, LCD
Data Retention	10 years min. Stores kWh & Meter set-up
Format	2 Rows x 4 Digits, 1 Row x 8 Digits + Legends
Scaling	Direct reading. User programmable CT & PT CT Primary programmable from 5A to 25kA VT primary programmable from 10V to 440kV
Legends	Wh, kWh, MWh etc. depending on user settings
AUXILIARY SUPPLY	
Standard	230V 50/60 Hz $\pm 15\%$
Options	110V 50/60 Hz $\pm 15\%$
Load	5 Watt Max.
Overload	x1.2 continuous
METER ACCURACY All errors ± 1 digit	
kWh	Better than Class 1 per EN 62053-21 & BS 8431
Kvarh	Better than Class 2 per EN 62053-23 & BS 8431
kW & kVA	Better than Class 0.25 IEC 60688
kvar	Better than Class 0.5 IEC 60688
Amps & Volts	Class 0.1 IEC 60688 (0.01In – 1.2In or 0.1Un – 1.2Un)
PF	$\pm 0.2^\circ$ (0.05In – 1.2In and 0.2Un – 1.2Un)
Neutral Current	Class 0.5 IEC 60688 (0.05In – 1.2In)

PULSE OUTPUTS	
Function	1 Pulse per unit of energy
Scaling	Settable between 1 & 1000 counts of energy register
Pulse Period	0.1 sec. default; Settable between 0.1 and 20 sec
Rise & Fall Time	< 2.0ms
Type	N/O Volt free contact. Optically isolated BiFET
Contacts	100mA ac/dc max ; 70Vdc/33Vac max ; 5W maximum load
Isolation	3.5kV 50Hz 1 minute
MODBUS® Serial Comms (Option)	
Bus Type	RS485 2 wire + 0v. ½ Duplex, ¼ unit load
Protocol	MODBUS® RTU with 16 bit CRC
Baud Rate	4800, 9600 or 19,200 User settable
Address	1 – 247 User settable
Latency	Reply within 250ms max.
Command Rate	New command within 5ms of previous one
Isolation	3.5kV
ETHERNET (Option)	
Electrical	IEEE std 802.3. 2000 Edition
Data Rate	10 Mbits/s
Protocol	TCP, UDP, DHCP, FTP, TFTP, HTTP, SNTP, SNMP
Connection	10/100 Base T - RJ45
Isolation	3.5kV
GENERAL	
Temperature	Operating -10°C to +55°C (14°F to 131°F) Storage -25°C to +70°C (-13°F to 158°F)
Humidity	< 75% non-condensing
Environment	IP54 (when correctly mounted, as described, in a panel) Altitude <2000m (6561ft)
MECHANICAL	
Terminals	Rising Cage. 4mm ² (12 AWG) cable max.
Enclosure	DIN 43700 96 x 96
Material	Mablex® with fire protection to UL94-V-O. Self extinguishing
Dimensions	96 x 96 mm x 83.5 mm (72 mm behind panel) 3.78" x 3.78" x 3.29" (2.83" behind the panel)
Weight	~ 250 gms
SAFETY	
Conforms to	EN 61010-1 Overvoltage Category III & BS 8431

SIMPSON ELECTRIC COMPANY
 520 Simpson Avenue
 Lac Du Flambeau, WI 54538
 715-588-3311
 Part #06-118351 Rev 01, 09/29/21