



**S664
Frequency Counter
Operation Manual**



About this Manual

To the best of our knowledge and at the time written, the information contained in this document is technically correct and the procedures accurate and adequate to operate this instrument in compliance with its original advertised specifications.

Notes and Safety Information

This Instruction Manual contains warning headings that alert the user to check for hazardous conditions. These appear throughout this manual where applicable, and are defined below. To ensure the safety of operating performance of this instrument, these instructions must be adhered to.



Caution, refer to accompanying documents.



Caution, risk of electric shock.

Technical Assistance

SIMPSON ELECTRIC COMPANY offers assistance Monday through Friday 8:00 am to 4:30 pm Central Time by contacting Technical Support or Customer Service at (715) 588-3311. Internet: <http://www.simpsonelectric.com>

Warranty and Returns

SIMPSON ELECTRIC COMPANY warrants each instrument and other articles manufactured by it to be free from defects in material and workmanship under normal use and service, its obligation under this warranty being limited to making good at its factory or other article of equipment which shall within one (1) year after delivery of such instrument or other article of equipment to the original purchaser be returned intact to it, or to one of its authorized service centers, with transportation charges prepaid, and which its examination shall disclose to its satisfaction to have been thus defective; this warranty being expressly in lieu of all other warranties expressed or implied and of all other obligations or liabilities on its part, and SIMPSON ELECTRIC COMPANY neither assumes nor authorizes any other persons to assume for it any other liability in connection with the sales of its products.

This warranty shall not apply to any instrument or other article of equipment which shall have been repaired or altered outside the SIMPSON ELECTRIC COMPANY factory or authorized service centers, nor which has been subject to misuse, negligence or accident, incorrect wiring by others, or installation or use not in accord with instructions furnished by the manufacturer.

Under the normal field usage there is no need to remove the front bezel of this product. The front bezel of this product should only be removed by a qualified technician.

Standard input module

Input Channels	A, B and User
Count edge	High to low transition (A and B channels)
Input Sources	Switch contact, CMOS or TTL logics, PNP or NPN devices
Input Impedance	Sinking: 10K, 5% Res. Pull-up to (9.0 - 16 VDC) $\pm 10\%$ Sourcing: 5.1K, 5% Res. Pull-down to common

Input Thresholds

A & B channels	Low Bias mode: VLT = 1.6V $\pm 10\%$ VUT = 3.6V $\pm 10\%$ High Bias mode: VLT = 5.0V $\pm 10\%$ VUT = 7.0V $\pm 10\%$
User Channel	VLT = 0.2V (min) VUT = 3.0V (max)
Low pass filter	Frequency < 200Hz (0 to 10V input square wave at 50% duty cycle)
Max voltage	A, B and User channels 30VDC maximum sustained

Quadrature / Universal input module

Input Channels	A, B and User
Input Inversion	User input polarity selectable. A and B channel polarity selective in standard mode only.
Operation modes	Standard, Quadrature X1 and Quadrature X4
Input Sources	Switch contact, CMOS or TTL logics, PNP or NPN devices quadrature (single-ended) encoders
Input Impedance	Sinking: 10K, 5% Res. Pull-up to (9.0 - 16 VDC) $\pm 10\%$ Sourcing: 5.1K, 5% Res. Pull-down to common

Input Thresholds

A & B channels	Low Bias mode: VLT = 1.6V $\pm 10\%$ VUT = 3.6V $\pm 10\%$ High Bias mode: VLT = 5.0V $\pm 10\%$ VUT = 7.0V $\pm 10\%$
User Channel	VLT = 0.9V (min) VUT = 3.15V (max)
Low pass filter	Frequency < 200Hz (0 to 10V input square wave at 50% duty cycle)
Max voltage	A, B and User channels 30VDC maximum sustained

Isolated 12V Excitation Module

Excitation Output	100 mA at 12 VDC $\pm 5\%$
Excitation Isolation	1500 V

Appendix A: Technical Specifications

A.1 Functional Specifications

Frequency modes	Scale 1	1.00 to 99.99 Hz	1 update / sec
	Scale 2	2.0 to 999.99 Hz	1 update / sec
	Scale 3	4 to 9999 Hz	2 updates / sec
	Scale 4	0.01 to 35.00 KHz	2 updates / sec
Frequency Inputs	Channel A and Channel B		
Miscellaneous inputs	Reset (Scale Select) and B (Direction Control)		
Maximum count rate	35 KHz (Standard and Quadrature X1 modes) 8.75 KHz (Quadrature X4 mode)		
Min pulse width	2 uS (Standard mode)		
Frequency range (internal)	-2,147,483,648 Hz to +2,147,483,648		
Frequency accuracy (instantaneous)	> ± 0.001% of reading		
Frequency vs temperature	+ 0.0001% of reading per °C		
Frequency vs time (aging)	± 0.001% of reading per year		
Display Digits	4-digit, 7-segment with leading zero blanking		
Display Decimal Point	Position according to selected scale		
Display LEDs	Red 0.56" (14.2mm), high efficiency		
Display Range	- 999 to + 9999 (Independent of decimal position)		

A.2 Electrical, Environmental and Mechanical Specifications

Power Requirements	AC Supply: 120 or 240 VAC, ±10%
Power Consumption	3VA
Reset Input Signal	Active Low: 0.2 VDC = active
Storage Temperature	-10 to 60°C
Operating Temperature	0 to 40°C
Relative Humidity	0 to 80% for temperatures less than 32°C, decreasing linearly to 50% at 40°C. (Non-condensing)
Bezel	3.93" x 2.04" x 0.52" (99.8 x 51.8 x 13.3mm)
Panel Cutout	3.62" x 1.77" (92 x 45 mm) 1/8 DIN
Case Depth	3.24" (82mm)
Weight	9.0 oz. (255.1 g)

Contents

1	Product Description.	3
1.1	General Description.	3
1.2	Part Number Identification.	4
1.3	Option Module Summary.	4
2	Hardware Setup.	5
2.1	Panel Installation.	5
2.2	Removing / Installing Option Modules.	6
2.3	120/240 VAC Power Module.	7
2.4	Standard Input Module.	7
2.5	Quadrature Input Module.	10
2.6	Excitation Module.	13
3	Display & Rear Panel Controls.	14
3.1	Display.	14
3.2	Display Error Messages.	15
3.3	Rate (Frequency) Scaling and Display.	15
3.4	A/B Channel Inputs.	16
	Appendix A: Technical Specifications.	17
A.1	Functional Specifications.	17
A.2	Electrical, Environmental and Mech. Specifications.	17

1 Product Description



1.1 General Description

The S664 frequency counter fits a 1/8 DIN standard cutout and is perfect for tight spaces, extending only 3.24" (82mm) behind the panel.

The unit is UL listed. The unit is for indoor use at altitudes up to 2000m, temperatures between 0° and 40°C, and installation category III, pollution degree 2.

The counter is powered from 120 or 240 VAC.

One of four frequency ranges may be selected to measure from 1Hz to 35KHz.

The counter accepts pulses from different types of sensors, including Quadrature, CMOS or TTL circuits and PNP or NPN devices.

An optional 12 VDC (100mA) excitation output module can provide power for external sensors.

3.4 A/B Channel Inputs

The A channel input is a pulse source. This signal must be limited to under 35 KHz. This corresponds to a minimum pulse width of 28.57 microseconds. The signal does not need an even duty cycle (On vs. Off time) as long as a minimum (high or low) of 1 microsecond is maintained (See figure 15).

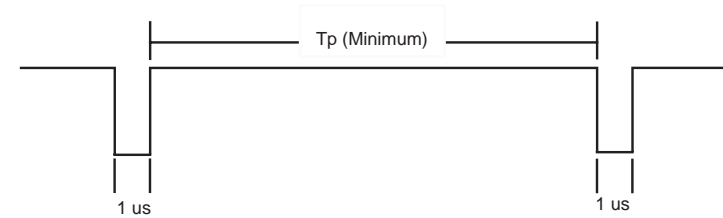


Figure 15. Input Pulse Definition

The B Channel acts as a direction control. If the B input is in the active state, frequency will be displayed as a negative number. When using the quadrature input card (in quadrature mode), A and B encoder signals are translated to Pulse and Direction signals internally.

3.2 Display Error Messages

Display	Description	Action Required
9999 or -999 (Flashing)	Display Over Range: The displayed count is too large for the counter to display. Since the internal count buffer is much larger than the display, the counter will maintain accurate frequency well beyond the display value.	Reset Counter
E3 (Outputs deactivate, count stops)	Watchdog Fault: The counter did not experience an orderly power-down. This can happen by exceeding the maximum allowable count speed for a sustained period of time.	Reset Counter

3.3 Rate (Frequency) Scaling and Display

The S664 can measure frequencies ranging from 1.00 Hz to 35 KHz. The frequency scale is selected according to Table 4. The frequency range is selected by using a wire or switch across the RESET and COMMON terminals on the rear of the counter. The range prompt (scl 1) will toggle each time the contact is made.


Range	Typical Update Period	Max Update Period	Min. Input Frequency	Max. Input Frequency	Comments / Typical Application
5CL1	1.0 sec	3.0 sec	1.00 Hz	99.99 Hz	1/100 Hz resolution / measure signals less than 100 Hz.
5CL2	1.0 sec	2.0 sec	1.6 Hz	999.9 Hz	1/10 Hz resolution / measure signals less than 1 KHz
5CL3	0.5 sec	1.0 sec	4 Hz	9999 Hz	1 Hz resolution / measure signals less than 10 KHz
5CL4	0.5 sec	1.0 sec	0.01 KHz	35.00 KHz	0.01 KHz resolution / measure signals in KHz

Table 4. Frequency Scale Selection

Frequency can also be displayed as a signed entity and will be negative according to the direction control. (See section 3.4.)

1.2 Part Number Identification

The following matrix indicates the configuration of your S664 counter.

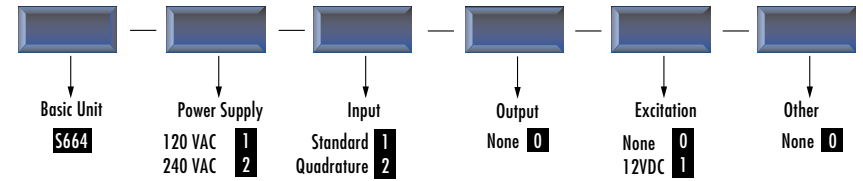

1.3 Option Module Summary

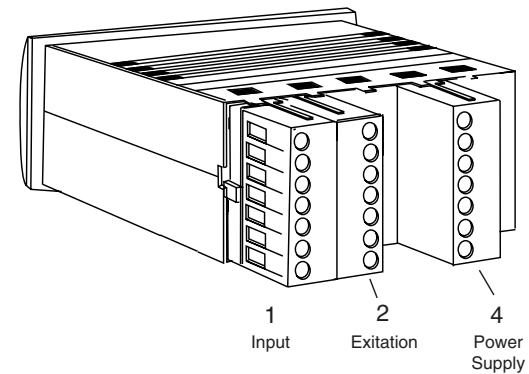


Figure 1. Option Module Slots (Rear View)

The S664 is a modular product that uses field configuring slide-in modules. The modules slide easily into the rear of the counter.

Figure 1 displays the functional assignments for each module position. Table 1 describes available option modules for the S664.

Module slot	Type	P/N	Description	See Section
1	Input		Standard Input Module	2.4
1	Input		Quadrature / Universal Input Module	2.5
2	Ext/Com.	45064	12 VDC Excitation Module	2.6
4	Power		120/220 VAC Power Module	2.3

Table 1. Option Module Summary

2 Hardware Setup

2.1 Panel Installation

The S664 1/8 DIN counter requires a standard 1/8 DIN panel cutout of 1.77" (45mm) high by 3.62" (92mm) wide. To install the counter into a panel cutout, remove the clips from the side of the counter. Slide the counter through your panel cutout, then slide the mounting clips back on. Press evenly to ensure a proper fit.

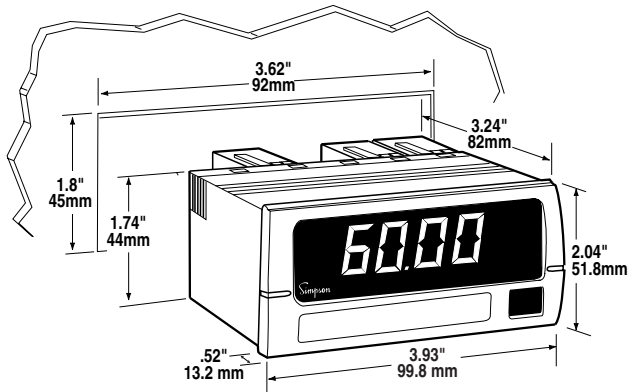


Figure 2. Counter and Panel Cut-Out Dimensions

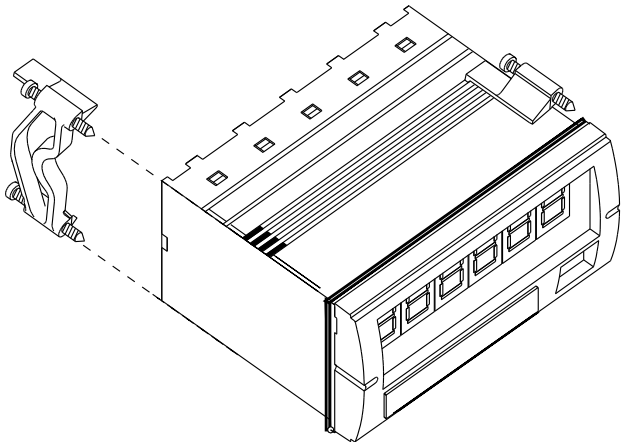


Figure 3. Panel Mounting Clips

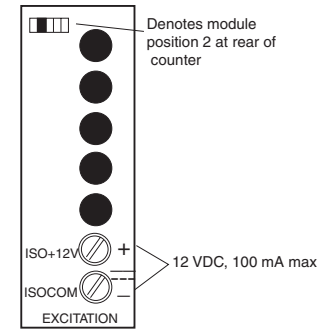


Figure 13. Excitation Module

3 Display & Rear Panel Controls

3.1 Display

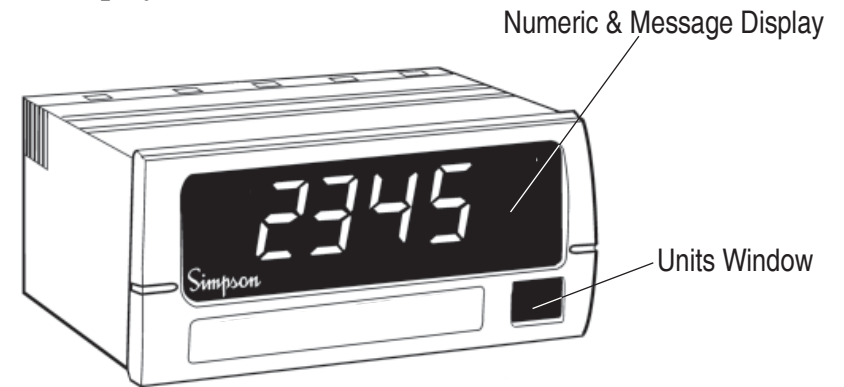


Figure 14. Display Layout

- 6-digit 0.56" high red LED display.
- Units Window for supplied label or legend.
- Upon power up, the S664 will identify its model and version.

2.6 Excitation Module

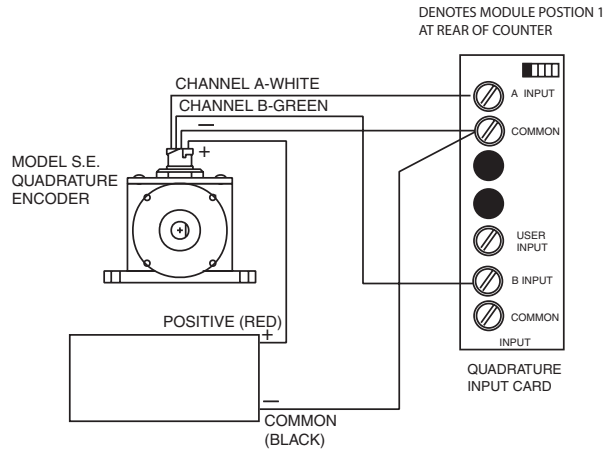


Figure 11. Wiring Encoder w/ Excitation Supply

12 VDC Excitation Module

The Excitation Module can supply 12 VDC at up to 100 mA for external sensors or encoders. This excitation is isolated from the counter internal logic supply. When using sensors or encoders that do not have a signal return or imply a signal return that is in common with the supply voltage, a common attachment that ties the excitation supply to the logic input common may be required. Examples of this appear in figures 8, 8a, 11 and 12.

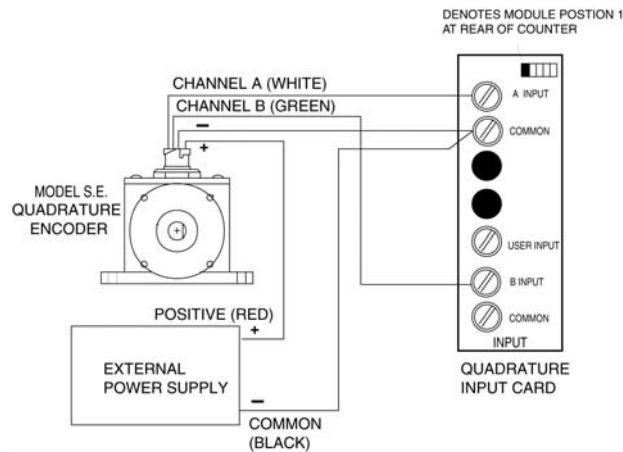


Figure 12. Wiring Encoder with External Supply

2.2 Removing / Installing Option Modules



Shut power off before removing or installing any option modules

1. Remove module from case by inserting a screwdriver into tab slot opening at top of input module. Apply pressure to release module from case. Repeat procedure for tab located on underside of module and then slide module away from the case.
2. Refer to appropriate section to configure switch or jumpers for proper operation. Table 1 can be used to identify modules and their associated detail paragraph.
3. Install module by carefully aligning module edges with slots in case and pressing forward until tabs (on top and bottom) engage.

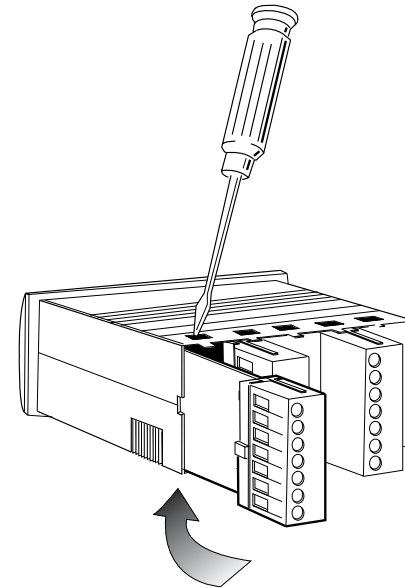


Figure 4. Removing Option Module

2.3 120/240 VAC Power Module



Remove power before wiring option modules.

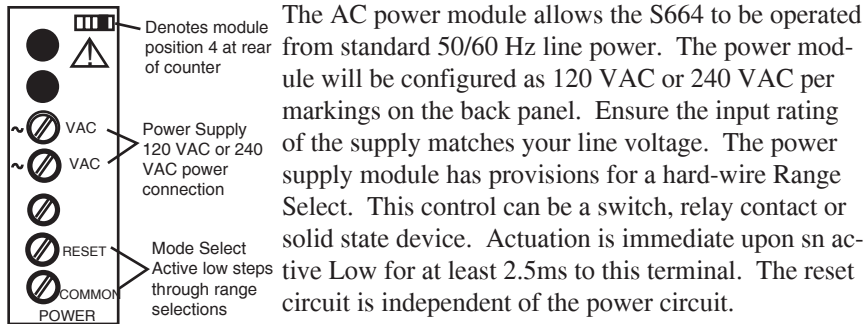


Figure 5. AC Power Module

NOTE: A fusible link is not provided on this module. A ½ Amp Time Delay fuse, Bussman MDL ½, or similar, is required.



Never connect AC mains (hot or neutral)

2.4 Standard Input Module

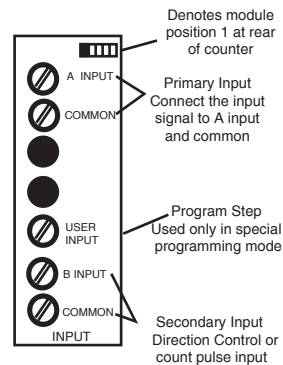


Figure 6. Standard Input Module

Table 3. Quadrature Module DIP Switch and Jumper Settings

JP1/2: Count Mode Selector

Jumpered 1-2 = Quadrature mode

Jumpered 2-3 = Standard counter mode

SW1: 10 Position DIP Switch

* = Factory Default setting

1 B Channel Bias:	OFF = Hi* VLT = 5.0V VUT = 7.0V (+/- 10%)
	ON = Low VLT = 1.6V VUT = 3.6V (+/- 10%)
2 B Channel Frequency:	OFF = Hi* (low pass filter disabled)
	ON = Low (low pass filter enabled)
3 B Channel Sensor:	OFF = Sinking* (internal pull-up enabled)
	ON = Source (internal pull-down enabled)
4 A Channel Bias:	OFF = Hi* VLT = 5.0 V VUT = 7.0V (+/- 10%)
	ON = Low VLT = 1.6 V VUT = 3.6V (+/- 10%)
5 A Channel Frequency:	OFF = Hi* (low pass filter disabled)
	ON = Lo (low pass filter enabled)
6 A Channel Sensor Type:	OFF = Sinking* (internal pull-up enabled)
	ON = Source (internal pull-down enabled)
7 B Channel Count Edge:	OFF = Rising (standard count mode only)
	ON = Falling*
8 A Channel Count Edge:	OFF = Rising (standard count mode only)
	ON = Falling*
9 User Input Polarity:	OFF = High/open circuit = Inhibit Count
	ON* = Low/closed circuit = Inhibit Count
10 Quadrature Mode:	OFF = X4 (quadrature mode only)
	ON = X1*

The Quadrature mode supports a wide range of encoders including the Simpson SE series.

While in Standard mode, this module works similarly to the Standard Input module, with the added capability to selectively invert the A, B, and User input signals.

NOTE: If B channel is not going to be used, use the default switch settings for SW1 positions 1 through 3.

Default settings are provided in Table 3. In both modes, the state of the User input signal can be selected as active high or active low. DIP switch SW1 configures the counter to match the specifications of the accompanying sensor. When shipped from the factory, the counter is set for X1 quadrature, as shown in Figure 10 and Table 3:

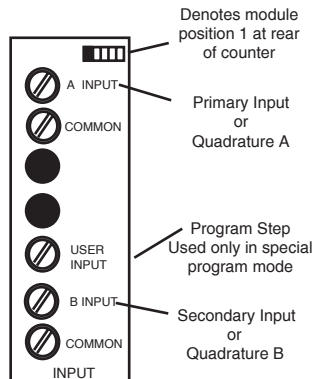


Figure 9. Quadrature / Universal Input Module

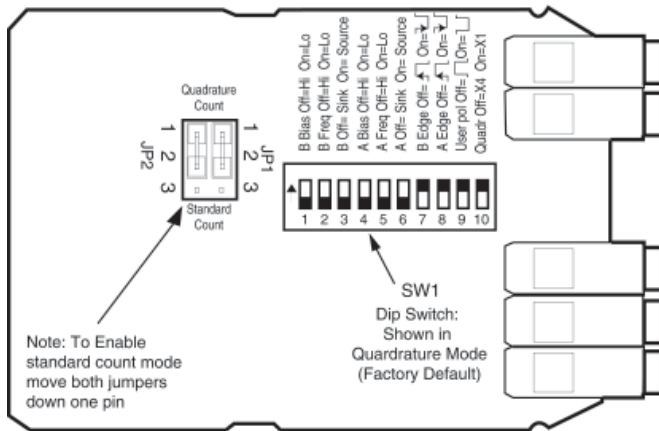


Figure 10. Quadrature Input Module Default Settings

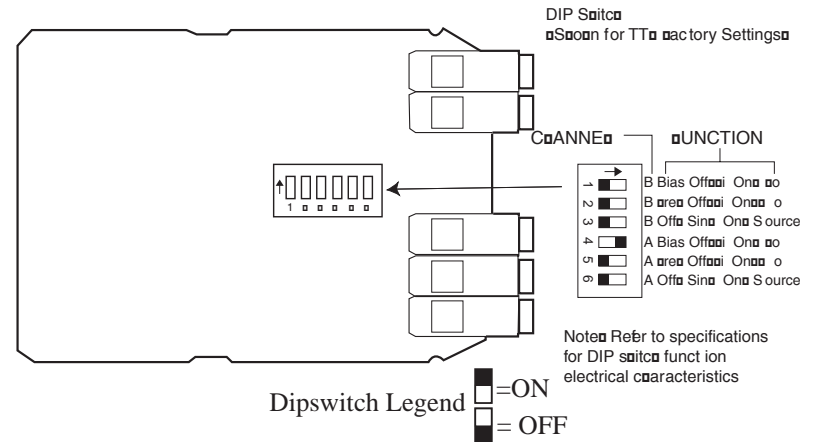


Figure 7. Standard Input Module Default Settings

DIP switch SW1, figure 7, is used to set up the counter to conform to the electrical characteristics of the sensor or signal being detected. Switch positions 1-3 configure channel B, while switches 4-6 configure channel A. These switches select bias (threshold voltages), low pass filter (enable/disable) and sensor type (Sink or Source). Refer to the documentation that accompanied the sensor for related information. The sensor can most likely be matched to one of the typical switch settings shown in figure 8 and figure 8a.

Note: The input boards are designed so that selecting sourcing or sinking is based on the type of sensor that is being used. If a PNP (sinking) sensor is being used, set the input board for sinking also (switches 3 and 6 = OFF).

If channel B is not used, default settings for switch positions 1 through 3 should be selected. Default settings are provided in Table 2.

The Input module also provides for a User input signal. On the S664, this input serves as a secondary channel (Rate) hard-wired reset. This may be used, for example, to reset latched alarm outputs that have been assigned to rate.

The S664 can accept inputs from many different sensors. The A and B channels may be configured independently as shown in Table 2. Figures 8 and 8a have examples of some typical sensors and the wiring connections that would be used.

Table 2. Standard Input Module DIP Switch Settings

* = Factory Default setting

1 B Channel Bias:	OFF = Hi* VLT=5.0 V VUT=7.0V (+/- 10%) ON = Low VLT=1.6 V VUT=3.6V (+/- 10%)
2 B Channel Frequency:	OFF = Hi* (low pass filter disabled) ON = Lo (low pass filter enabled)
3 B Channel Sensor:	OFF = Sinking* (internal pull-up enabled) ON = Source (internal pull-down enabled)
4 A Channel Bias:	OFF = Hi VLT=5.0 V VUT=7.0V (+/- 10%) ON = Low* VLT=1.6 V VUT=3.6V (+/- 10%)
5 A Channel Frequency:	OFF = Hi* (low pass filter disabled) ON = Lo (low pass filter enabled)
6 A Channel Sensor Type:	OFF = Sinking* (internal pull-up enabled) ON = Source (internal pull-down enabled)

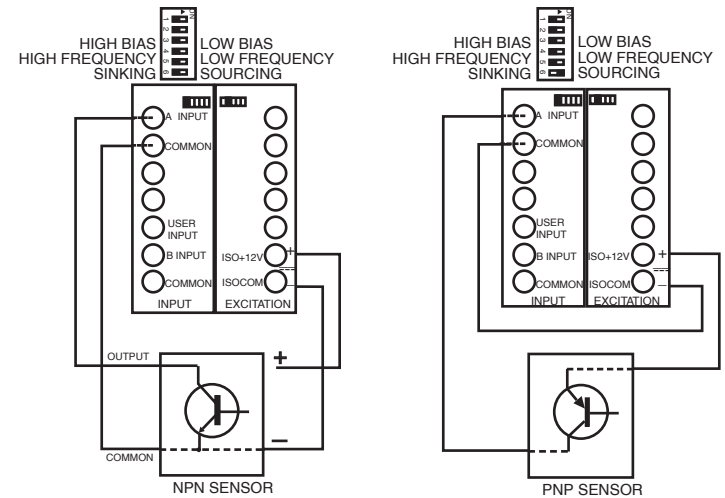


Figure 8. Sensor Connection Examples

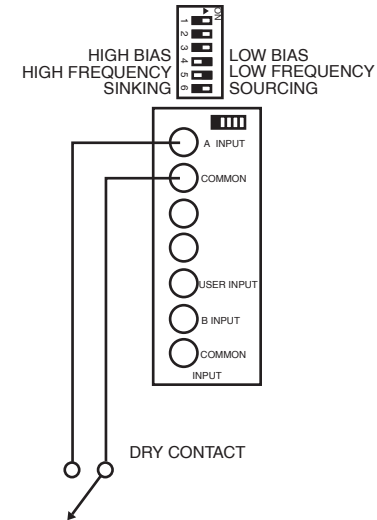


Figure 8a. Sensor Input example

2.5 Quadrature Input Module

The Quadrature / Universal Input Module has two operational modes: Quadrature mode and Standard mode. Quadrature mode is selected by positioning JP1 and JP2 on pins 1 and 2. Standard mode is selected by placing JP1 and JP2 on pins 2 and 3 (see Figure 10 for details).